

CODE: **EN54-3A17LCD** v.1.0/III TYPE: **EN54 27,6V/3A/2x17Ah/LCD** 


power supply for fire alarm systems

**EN\*\*** 







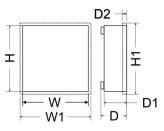

 $\epsilon$ 

"This product is suitable for the systems designed in complince with the PN-EN 54-4"

Requirements	Requirements according to standards	PSU EN54-3A17LCD
External Power Supply failure indication	YES	YES
Two independent power supply outputs protected against short-circuit	YES	YES
Temperature-compensated battery charging	YES	YES
Measurement of the resistance of the battery circuit	YES	YES
Low battery indication	YES	YES
Deep discharge battery protection	YES	YES
Protection against short-circuit of the battery terminals	YES	YES
Blown battery fuse indication	YES	YES
Charging circuit failure indication	YES	YES
Low output voltage indication	YES	YES
High output voltage indication	YES	YES
Indication of power supply failure	YES	YES
Overvoltage protection	YES	YES
Short-circuit protection	YES	YES
Overload protection	YES	YES
Output of collective failure ALARM	YES	YES
EPS technical output	YES	YES
APS technical output	YES	YES
PSU technical output	-	YES
Input of an external failure indication EXTi	-	YES
Controlled relay output EXTo	-	YES
Remote battery test	-	YES
230V AC mains supply voltage measurement	-	YES
LCD optical indication	-	YES
Tamper indicating enclosure opening	-	YES



#### **PSU** features:

- In accordance with standards: EN 54-4, EN12101-10
- 27.6V DC/ 3A uninterruptible power supply
- battery housing for two 17Ah/12V batteries
- independently protected outputs AUX1 and AUX2
- high efficiency 84%
- low level of voltage ripple
- microprocessor-based automation system
- intelligent PSU overload protection
- measurement of the resistance of the battery circuit
- automatic temperature-compensated charging
- battery test
- two-stage battery charging process
- · accelerated battery charging
- · monitoring of the continuity of the battery circuit
- · monitoring of the battery voltage
- · monitoring of the battery fuse
- monitoring of charging and maintenance of the batteries
- deep discharge battery protection (UVP)
- battery overcharge protection
- battery output protection against short-circuit and reverse connection
- monitoring of the load current
- · output voltage control
- fuse monitoring of AUX1and AUX2 outputs
- 230V AC mains voltage measurement
- "SERIAL" communication port with implemented MODBUS RTU protocol
- free program "PowerSecurity" to monitor the performance of the PSU
- remote control (options: WiFi, Ethernet, RS485, USB)
- remote battery test (required additional modules)

- cooperation with optional EN54-LB4 or EN54-LB8 fuse modules
- · optical indication of PSU overload OVL
- · acoustic indication of failure
- adjustable delay for 230V AC power loss indication
- · output of collective failure ALARM
- input of collective failure EXTi
- · controlled relay output EXTo
- technical inputs/outputs with galvanic isolation
- EPS technical output indicating 230V AC power loss
- PSU technical output indicating PSU failure
- APS technical output indicating battery failure
- internal memory of PSU operating status
- optical indication LCD panel
  - readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltage
  - failure indication
  - configuration of the PSU settings from the control panel
  - two levels of password protected access
  - operation memory of the PSU
  - · failure memory
  - real time clock with battery backup
- protections:
  - SCP short-circuit protection
  - OLP overload protection
  - OHP overheat protection
  - OVP overvoltage protection
  - · Surge protection
  - Antisabotage protection (Tamper)
- closing the enclosure lock
- · convection cooling
- warranty 5 years from the production date

#### General description

The buffer power supply has been designed for an uninterrupted supply of fire alarm systems, smoke and heat control systems, fire protection equipment and fire automatics requiring stabilized voltage of 24V DC (± 15%). The PSU is fitted with two independently protected outputs AUX1 and AUX2, which supply voltage of **27.6 V DC** with a total output current:

Continuous operation
Output current Imax a=2A

Instantaneous operation Output current Imax b=3A

In case of power loss, the PSU switches to battery power, providing uninterruptible power supply. The PSU is enclosed in a metal casing (color: RAL 3001 - red) with battery housing for two 17Ah/12V batteries. The PSU works with maintenance-free lead acid batteries made with AGM technology or gel technology.




Functional class PN-EN 12101-10:2007	A
Mains supply	230V AC (-15%/+10%)
Current consumption	0,56A @230V AC
Power frequency	50Hz
PSU's power	83W
Efficiency	84%
Output voltage at	22,0V÷ 27,6V DC – buffer operation
20 °C	20,0V÷ 27,6V DC – battery-assisted operation
Output current	Continuous operation: Imax a=2A
	Instantaneous operation: Imax b=3A
Maximal resistance of the battery circuit	300m Ohm
Ripple voltage	90mV p-p max.
	I = 65mA
Current consumption by the PSU	I = 55mA – LCD panel backlight off
during battery-assisted operation	Caution! If the power supply is connected with the communication interface or
Dette we also we're a command	fuse module, additional current consumption should be considered.  1A
Battery charging current  Coefficient of temperature compensation of the	IA I
	-40mV/ °C (-5 °C ÷ 40 °C)
battery voltage  Low battery voltage indication	Ubat < 23V, during battery mode
Low battery voitage indication	U>30,5V±0,5V - disconnection of the output voltage ( AUX+ disconnection),
Overvoltage protection OVP	automatic return
Short-circuit protection SCP	
Short-circuit protection Sor	F5A - F <sub>AUX1</sub> , F <sub>AUX2</sub> melting fuse (failure requires fuse replacement)
Overload protection OLP	Hardware - Software
Battery circuit protection SCP and reverse	
polarity connection	F6,3A - F <sub>BAT</sub> melting fuse (failure requires fuse replacement)
Deep discharge battery protection UVP	11.00///.00/
' ' '	U<20V (± 2%) – battery disconnection
TAMPER output indicating enclosure opening	Microswitch TAMPER
Technical outputs:	- type – electronic, max 50mA/30V DC, galvanic isolation 1500V <sub>RMS</sub>
- EPS FLT; indicating AC power failure	- delay time approximately 10s/1m/10m/30m (+/-5%) – configured from the
	control panel
- APS FLT; indicating battery failure	- type – electronic, max 50mA/30V DC, galvanic isolation 1500V <sub>RMS</sub>
- PSU FLT; indicating PSU failure	
- ALARM; indicating collective failure	
, <b>3</b>	N / / ON / ON / ON / DO
	Voltage "ON" – 10÷30V DC
EXTi technical input	Voltage "OFF" – 0÷2V DC
EXTi technical input	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub>
	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC
EXTi technical input	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC - LEDs on the PCB of the power supply unit,
EXTi technical input	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel
EXTi technical input	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of
EXTi technical input  EXTo relay output	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication
EXTi technical input	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel
EXTi technical input  EXTo relay output	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access
EXTi technical input  EXTo relay output	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values
EXTi technical input  EXTo relay output	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication • configuration of the PSU settings from the control panel • 2 levels of password protected access • operation memory of the PSU – 6144 values • failure memo - 2048 events
EXTi technical input  EXTo relay output	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication • configuration of the PSU settings from the control panel • 2 levels of password protected access • operation memory of the PSU – 6144 values • failure memo - 2048 events • real time clock with battery backup
EXTi technical input  EXTo relay output  Optical indication:	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication • configuration of the PSU settings from the control panel • 2 levels of password protected access • operation memory of the PSU – 6144 values • failure memo - 2048 events
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub>	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V F 6,3A / 250V
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub>	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V F 5A / 250V F 5A / 250V
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub>	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub>	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub>	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub>	Voltage "OFF" – 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - Ethernet "INTE" interface; Ethernet communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment	Voltage "OFF" – 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTUR" interface; USB-RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - USB-RS485 "INTUR" interface; Ethernet communication - Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment	Voltage "OFF" – 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)	Voltage "OFF" – 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)	Voltage "OFF" — 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)  Enclosure Enclosure dimensions	Voltage "OFF" — 0÷2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)  Enclosure Enclosure dimensions Net/gross weight	Voltage "OFF" — 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - WiFi "INTV" interface; Ethernet communication - WiFi "INTV" interface; WiFi wireless communication - RS485-WiFi "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRE" interface; RS485-WiFi wireless communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication - Steel plate DC01 1,2mm, color: RAL 3001 (red)  420 x 420 x 102 (WxHxD) [mm] (+/- 2)  9,0/10,0 kg
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)  Enclosure  Enclosure dimensions  Net/gross weight Fitting battery	Voltage "OFF" — 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 6,3A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - WiFi "INTW" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication Steel plate DC01 1,2mm, color: RAL 3001 (red)  420 x 420 x 102 (WxHxD) [mm] (+/- 2) 9,0/10,0 kg 2x17Ah/12V (SLA) max.
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)  Enclosure  Enclosure dimensions  Net/gross weight  Fitting battery  Closing	Voltage "OFF" — 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - WiFi "INTW" interface; Ethernet communication - WiFi "INTW" interface; Ethernet communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication
EXTi technical input  EXTo relay output  Optical indication:  LCD screen battery  Fuses:  - FMAINS - FBAT - FAUX1 - FAUX2  Additional equipment (not included)  Enclosure Enclosure dimensions Net/gross weight Fitting battery Closing Certificates, declarations, warranty	Voltage "OFF" — 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; Ethernet communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication - Steel plate DC01 1,2mm, color: RAL 3001 (red)  420 x 420 x 102 (WxHxD) [mm] (+/- 2) - 9,0/10,0 kg  2x17Ah/12V (SLA) max.  Key lock CE, RoHS, 5 years from the production date
EXTi technical input  EXTo relay output  Optical indication:  Acoustic indication:  LCD screen battery  Fuses:  - F <sub>MAINS</sub> - F <sub>BAT</sub> - F <sub>AUX1</sub> - F <sub>AUX2</sub> Additional equipment (not included)  Enclosure  Enclosure dimensions  Net/gross weight  Fitting battery  Closing	Voltage "OFF" — 0+2V DC Level of galvanic isolation 1500V <sub>RMS</sub> 1A@ 30V DC /50V AC  - LEDs on the PCB of the power supply unit, - LCD panel  • readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication  • configuration of the PSU settings from the control panel  • 2 levels of password protected access  • operation memory of the PSU – 6144 values  • failure memo - 2048 events  • real time clock with battery backup  - piezoelectric indicator ~75dB /0,3m  3V lithium battery, CR2032  T 3,15A / 250V F 5A / 250V F 5A / 250V - USB-TTL "INTU" interface; USB-TTL communication - RS485 "INTR" interface; RS485 communication - USB-RS485 "INTUR" interface; USB-RS485 communication - WiFi "INTW" interface; Ethernet communication - WiFi "INTW" interface; Ethernet communication - RS485-Ethernet "INTRE" interface; RS485-Ethernet communication - RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication



### Parameters remote control system.

(additional modules required)

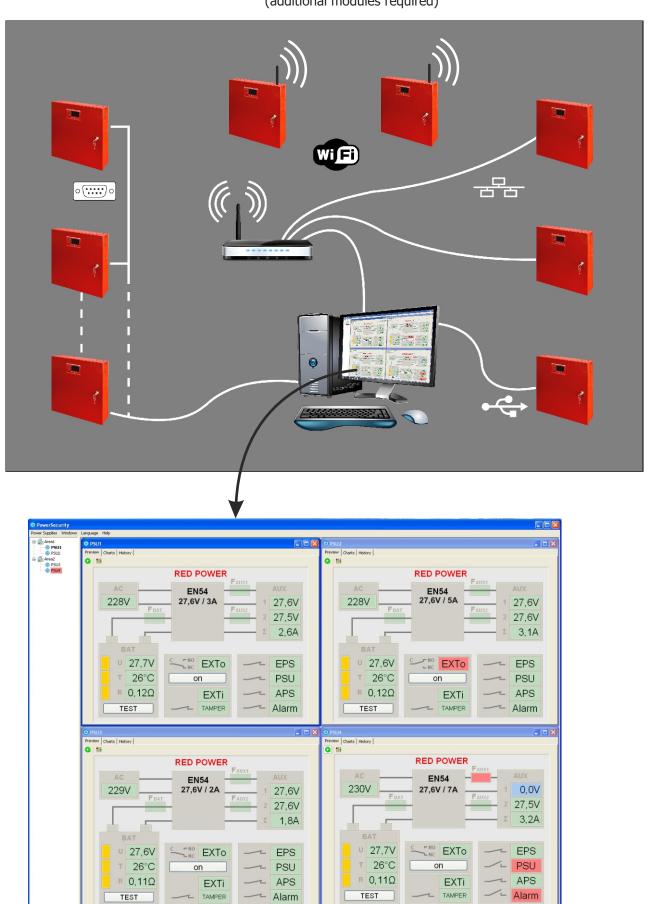




#### Remote monitoring (options: Wi-Fi, Ethernet, RS485, USB).

The PSU has been adjusted to operate in a system that requires a remote control of the parameters in a monitoring centre. Transmitting data concerning PSU status is possible due to an additional, external communication module responsible for communication in Wi-Fi, Ethernet or RS485 standard. It is possible to connect the PSU and the computer via the USB –TTL interface.

Different connection topologies, presented later in this chapter, are only a part of possible communication schemes. More examples can be found in the manuals dedicated to individual interfaces.

#### Communication via the USB-TTL interface.


The easiest way of communication between the PSU and the computer is provided by the USB-TTL "INTU" interface. This interface allows direct connection between the computer and the PSU and is recognizable by the operating system as a virtual COM port.

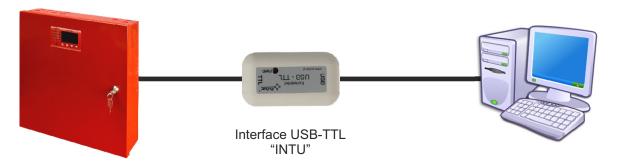

USB-TTL communication using the USB-TTL "INTU" interface.

#### RS485 network communication.

Another type of network communication is the RS485 communication using two-wire transmission path. To achieve this kind of data exchange, the PSU should be equipped with the additional RS485 TTL "INTR" interface, converting data from the PSU into the RS485 standard and the USB-RS485 "INTUR" interface, converting data from the RS485 network to the USB. Offered interfaces are galvanically isolated and protected against surges.

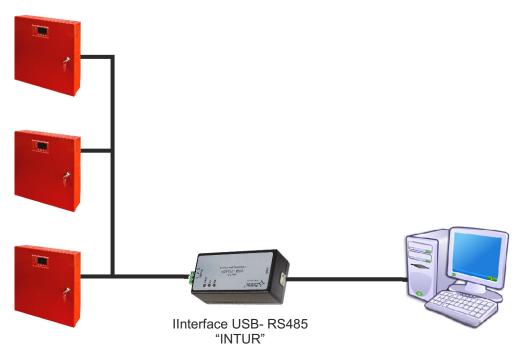


RS485 communication using the "INTR" and "INTUR" interfaces.




#### ETHERNET network communication.

Communication in the Ethernet network is possible due to the additional interfaces: Ethernet "INTE" and RS485-ETH "INTRE", according to the IEEE802.3 standard.

The Ethernet "INTE" interface features full galvanic isolation and protection against surges. It should be mounted inside the enclosure of the PSU.

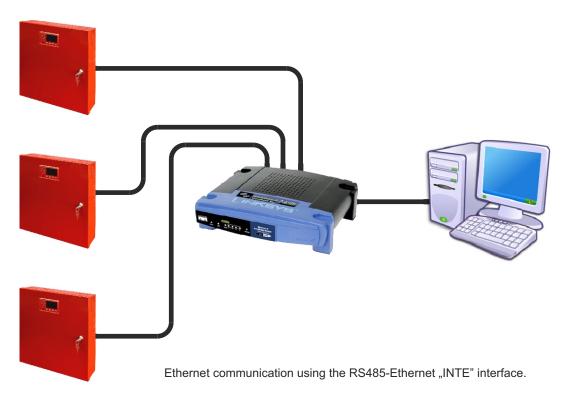

The RS485-ETHERNET "INTRE" interface is a device used to convert signals between the RS485 bus and the Ethernet network. For proper operation, the unit requires an external power supply in the range of 10÷30V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

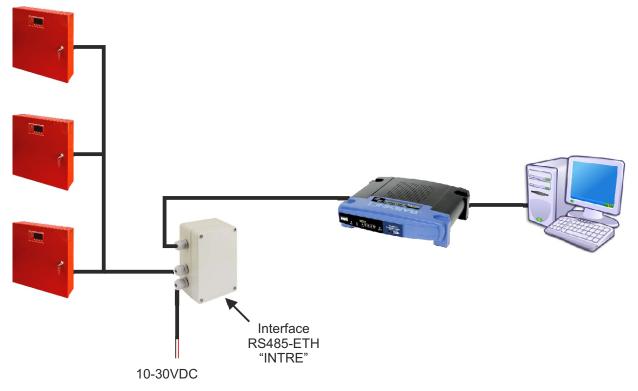


Ethernet communication using the RS485-Ethernet "INTRE" interface.




#### The Wi-Fi wireless communication.

The Wi-Fi wireless communication can be implemented on the basis of additional interfaces: WI-Fi 'INTW' and RS485-WiFi, operating within 2,4GHz frequency band, according to the IEEE 802.11 bgn standard. The WiFi 'INTW' interface shall be mounted in a selected location inside the enclosure so that the antenna is exposed to the outside.

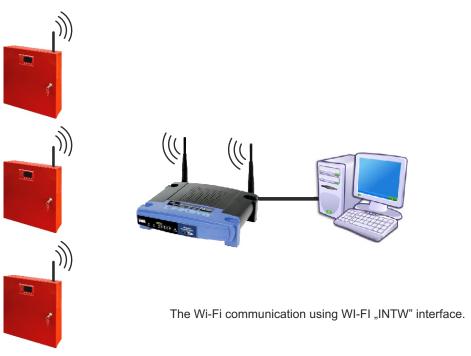

The RS485-WiFi "INTRW" interface is a device used to convert signals between the RS485 bus and the WiFi network. For proper operation, the unit requires an external power supply in the range of 10÷30V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

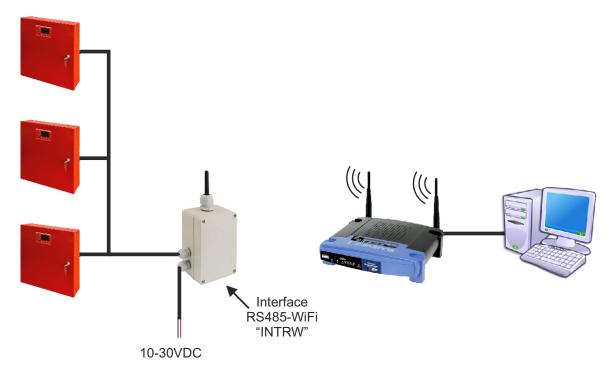


The The Wi-Fi communication using the RS485-WIFI "INTRW" interface.




#### Fuse modules EN54-LB4 end EN54-LB8

Fuse modules EN54-LB4 end EN54-LB8 allow to connect 4 or 8 receivers to the PSU. Output state is indicated by green LEDs.

Blown fuse signal is transmitted to the input of collective failure EXTi (ALARM) and saved in the internal memory of PSU. The PSU's relay output can also be used for remote control, including external optical indication.

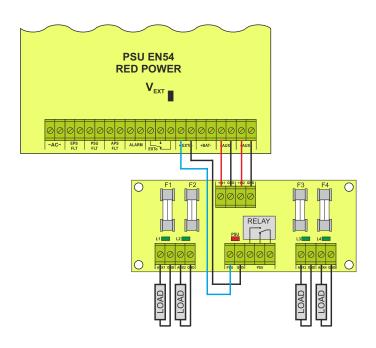

The connection of fuse module: EN54-LB4.

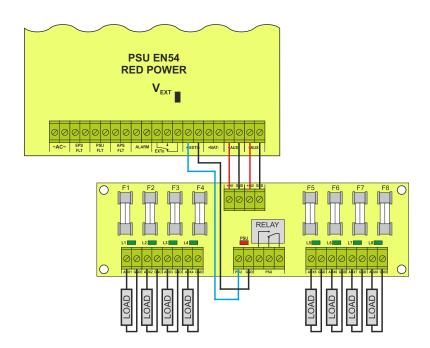

The connection of fuse module: EN54-LB8.